

Contents

Chapter 1: Introduction	1
Welcome	1
About the Manual	2
Checklist.....	3
Standard Items.....	3
Optional Items.....	3
Recommendations	3
Features	4
 Chapter 2: Installation	 8
Quick Installation Table.....	8
Quick Jumper Setting Reference	9
Before You Begin	13
Static Electricity	13
Choosing a Case	13
How to Set Jumpers	14
Preparing the Mainboard.....	15
Mainboard Guide	15
I/O Ports Side View	17
Check the Jumper Settings	18
Install the Mainboard in the Case.....	23
Connecting Power, Chassis Fan, and Panel.....	24
Install Other Hardware	26
Install the Processor	26
Installing a Socket-370 Processor.....	27
Install the Memory Modules	29
Install a Hard Disk Drive and CD-ROM	30
Installing a Floppy Diskette Drive	33
Using the Expansion Slots.....	34
Add-in Card Options	36
Install Options and Extension Brackets	37
External Connector Color Coding.....	41

Chapter 3: Setup	42
About the Setup Utility	42
Starting the Setup Utility	42
How to Flash a New BIOS	44
Standard CMOS Features Option	45
Advanced BIOS Features Setup Option	47
Advanced Chipset Features Option	49
Integrated Peripherals Option	52
Power Management Setup Option	55
PNP/PCI Configuration Option	60
PCI Health Status Option	61
Frequency / Voltage Control Option	62
Load Fail-Safe Defaults Option	63
Load Optimized Defaults Option	63
Set Supervisor and User Passwords	63
Save And Exit Setup Option	64
Exit Without Saving Option	64
 Chapter 4: Software	 65
About the Software	65
Folders for this Mainboard	65
Running the Support CD-ROM	67
Utility Folder Installation Notes	67
CMI8X38 Folder Installation Notes	68
Audio Software	68
Modem Driver and Software	69
Peripheral Folder Installation Notes	69
VIA Folder Installation Notes	69
Mainboard (P6VAP-A+) Installation Notes	70
 Appendix 1: Quick Jumper Setting Reference	 71